

R.J.BRAVERMAN CORP.

88 PARADE RD

MEREDITH, NH 03253

1-800-PEN GUNS

PEN PISTOL

WARNING * WARNING * WARNING

LOAD IN STRAIGHT POSITION ONLY

NEVER PUT YOUR HAND IN FRONT OF THE MUZZLE

For your safety, and that of others, we strongly recommend that you do not load this pistol until you are completely familiar with its safety features and proper procedures for the safe handling of your pistol.

SAFE GUN HANDLING IS YOUR RESPONSIBILITY

Do not load this pistol until you can easily cock the gun into its ready to fire position, and then easily put it back into its straightened and safe position. Although the Pen Pistol does have safety mechanisms, **REMEMBER** when the pistol has been cocked in the ready to fire position, the gun is ready to be fired. Failure to understand this can result in injury or death. We provide reasonable care in the manufacture of this gun, but assume no responsibility for its care, handling or use.

STRAIGHT POSITION

←PULL TO OPEN→

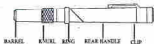 


FIGURE 1

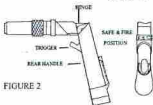


FIGURE 2

FIGURE 3

OPERATING INSTRUCTIONS

SAFETY

The Pen Pistol utilizes three(3) main safety features.

1. When the pistol is in its straight position, it cannot be fired. This is the safest position.
2. The pistol has a floating breech block which is operated by the ring located behind the barrel. When the gun is cocked to fire, you must twist the ring clockwise (to the right) which aligns the hole in the breech block with the firing pin.
3. Once the gun has been fired, and the firing pin is extended through the hole, you will not be able to unscrew the barrel, or screw on the barrel without first recocking the gun. To put the gun into the safe position after firing you must first close the gun, recock it into the firing position, then close the gun again. This action will draw the firing pin behind the breech block so that you can unscrew the barrel.

GENERAL

Fully understand the operation of your firearm before loading and firing it.

Always have your firearm pointed in a safe direction.

Always check the firearm for live ammunition when picking it up, or before passing it to someone, or receiving it from someone. Always empty the chamber before storing it away. Never look down a barrel of any gun to see if it is loaded.

Never use alcoholic beverages or other drugs before or while using firearms.

If your firearm fails to operate properly do not try to fire it and do not force an action that is jammed.

Use only commercially manufactured ammunition of the specific caliber designed for this firearm. Do not alter the barrel or chamber for the use of an undesignated caliber of ammunition.

LOADING

WARNING: Pointing the muzzle of your gun in a safe direction is a must while loading, unloading, cocking or firing. Any negligent behavior during ANY of these procedures could result in serious injuries. The end of the muzzle should never be covered by your hand or pointed toward any body part.

This gun should be loaded in the straight position only Fig 1. Unscrew the barrel from the receiver. Load one shell into the barrel. Securely screw the barrel back onto the receiver. The pistol is now a loaded weapon and should be treated as such.

FIRING

WARNING: Point the muzzle of your gun in a safe direction while loading, unloading, cocking or firing. Any negligent behavior during ANY of these procedures may result in a serious or fatal injuries. The end of the muzzle should never be covered by your hand or pointed toward any body part.

Pull the barrel out of the lower receiver approximately 1 to 2 inches. The barrel should then be bent down in an 80° angle. The pen is now in the "pistol" form Fig 2 . The safety should still be engaged. To fire the pistol you rotate the safety ring clockwise (to the right) into the firing position Fig 3. You then lift UP on the trigger until the pistol fires.

UNLOADING

After firing the pistol you must get the firing pin behind the breech block by closing the pistol back into the pen position, then recock the gun into the firing position, which draws the firing pin back behind the wall, then close the pistol back into it's pen shape again. The pistol should now be in the safe position, and the barrel should now unscrew for reloading.

The first few times you try to close the pistol may be difficult. The trick is to pull the barrel and the receiver straight up and out of the handle before straightening.

IMPORTANT THINGS TO REMEMBER ABOUT THE PEN PISTOL

1. The Pen Pistol resembles a pen or a small flashlight when closed. Someone can easily pick it up without knowing what it is. Never take a chance or assume that no one will touch the gun.
2. The Pen Pistol is an emergency defense weapon designed to fire one shot at close range.
3. Never carry the Pen Pistol in the ready to fire position.
4. Never put your finger on the trigger until you are ready to fire the weapon.
5. Always point the gun in a safe direction.
6. Always load in straight position only (FIG 1)
7. If the Pen Pistol should jam or fail to fire when the trigger is pushed up, wait 20 seconds and with the gun pointed in a safe direction unscrew the barrel, keeping the hands clear of the muzzle. With the barrel removed and the gun cocked, turn the safety ring and make sure the breech/safety wall is easily moving up and down. If there is a problem call us toll free, 1-800-PEN GUNS.

LIMITED ONE YEAR WARRANTY

Your gun has a limited one year warranty. We will repair or replace any gun returned, prepaid, within one year of purchase. Warranty is void if hand loaded ammunition is used. Warranty is void if your gun is disassembled or altered in any way. Warranty is void if you fail to read instructions before using your gun and follow them while using it. The warranty does not cover damages caused by customer abuse of this gun, such as using it as a hammer, dropping it, exposing it to salt water for extended periods of time, or excessive dry firing, etc.. We make no warranty of "fitness" of our product for a particular purpose. It is the responsibility of the buyer to compare various firearms. It is the responsibility of the buyer to compare various firearms manufactured and select the one that best fits the needs of the purchaser. If you should have a problem with your gun, either phone us at 1-800-PEN GUNS, or write us a letter describing the problem before returning the gun. Please include a copy of your sales receipt to establish your date of purchase.

STRAIGHT POSITION
←---PULL TO OPEN---→

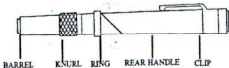


FIGURE 1

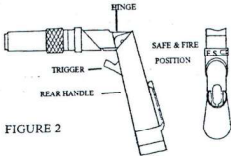


FIGURE 2

FIGURE 3